

If Your router is not listed below, scroll up one line and click on “click here”

**ROUTER COMPATIBILITY TABLE FOR CIRCLE GUIDE MODELS**  
**200, 270, 300, AND 400**

**ALL OF THE ROUTERS LISTED BELOW ARE PLUNGE ROUTERS**

Remove Plastic Sub-base from Router before mounting  
 (Note: Some router bases are not removable)

ROUTER MODEL

SCREW SIZE / # OF SCREWS

Black & Decker: RP 200 and SS 1000 RP	—————>	Use 3 - 10-32 Screws
Bosch:1613, 1450, RA 1166, 1617/16181, MRC23EVSK 1615	—————> —————>	Use 3 - 4MM Screws Use 2 - 10-32 Screws
DeWalt: DW 611*, DW 615, DW 616, DW 618, DW 621, DW 625, DW 6182	—————> —————>	Use 2 - 6MM Screws Use 3 - 10-32 Screws
Elu 177	—————>	Use 2 - 6MM Screws
Fein FT-1800	—————>	Use 2 - 6MM Screws
Freud FT 2000	—————>	Use 2 - 10-32 Screws
Hitachi: M8V, TR12, M12V KM12VC	—————> —————>	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
Harbor Freight: Item 67119*	—————>	Use 3 - 10-32 Screws
Makita: 3612C, 3621 RP 1101	—————> —————>	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
Porter Cable: PC7529, PC690 Series, PC8529, PC894PK, PC895PK, PC8902/8931	—————>	Use 3 - 10-24 Screws
Rigid: R2930 (Plunge)	—————>	Use 3 - 10-32 Screws
Ryobi: RE180PL, Plunge Base, R175	—————>	Use 2 - 10-32 Screws
Craftsman: 1617-12, 17543, 17517 Digital, 17540, 28084 Professional D9 M27666R, D9 M27669R 315.268.350	—————> —————>	Use 3 - 10-32 Screws Use 2 - 10-32 Screws
Skil: 1823, 1825, 1830, 1835, 1840, 1845-02	—————>	Use 3 - 10-32 Screws
* Do not remove base plate		