


1. 部件介绍 (Parts names)

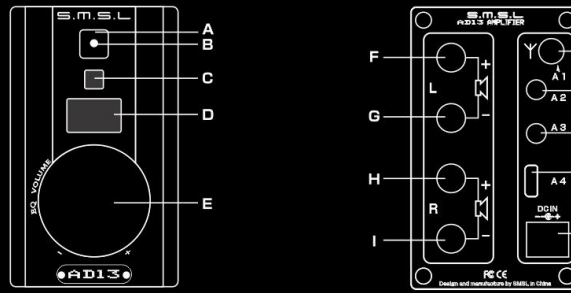

- A: 功能按键 (Function Button)**
- 长按开机或关机 (Long press means turn ON or OFF)
 - 短按信号输入选择 (Short press to select input source)
- B: 待机, 蓝牙指示灯 (Standby and Bluetooth LEDs)**
- 红灯亮为待机状态 (red for standby)
 - 蓝灯亮为蓝牙成功连接 (Blue LED lights up while Bluetooth connected)
- C: 遥控接收窗 (Remote receiver window)**
- D: 信号输入显示和音量显示 (静音闪烁) EQ模式显示。**
(Display the inputs, volume, EQ mode, the volume digit flashing while muting)
- E: 音量加减旋钮和EQ切换键**
(E: Volume control and EQ mode switch)
- 注意: 顺时针为增大, 逆时针为减小。
(Note: Clockwise to raise volume; Counter clockwise to lower volume)
- F: 左声道输出正端**
(Left speaker +)
- G: 左声道输出负端**
(Left speaker -)
- H: 右声道输出正端**
(Right speaker +)
- I: 右声道输出负端**
(Right speaker -)
- J: 蓝牙输入 (Bluetooth Antenna)**
- K: 模拟输入, 最大输入电压1Vrms**
(Analog input, Maximum Input Voltage 1Vrms)
- L: 模拟输入, 最大输入电压2Vrms**
(Analog input, Maximum Input Voltage 2Vrms)
- M: USB输入 (USB input)**
- N: 电源输入接口 (Power inlet)**
- 显示屏显示 A1 是蓝牙输入, A2, A3 为模拟输入, A4 为 USB 输入。
(A1 is Bluetooth, A2-A3 is analog, A4 is USB).

2. EQ 模式说明 (EQ Setting)

- "E1" 为双木三林注册专利SDB音效;
- "to" 由 B1-B3 三种低音, t1-t3 三种高音组成, 且高低音调节可同时使用。

EQ操作说明:

(1) 用遥控器操作

- 按下遥控器上的EQ按键, 显示屏会显示EQ当前状态;
- 再次按下会改变EQ模式, 模式会在EQ, E1, to 模式间循环切换;
- 按下遥控器上的FUNC按键, 模式会在VOL-BASS-TREBLE模式间循环切换, 音量加减键进行高音或低音调节。

(2) 用主机旋钮操作EQ功能

- 按下主机上的旋钮显示屏会显示EQ当前状态;
- 再次按下会改变EQ模式, 模式会在VOL-EQ-BASS-TREBLE;
- 用旋钮去调EQ或高低音。

△注: 当显示为EQ时, EQ功能是能被关闭;

当显示为to时, 高低音功能才能被打开。

- "E1" uses SDB effects patented by S.M.S.L;
- "to" consist of B1-B3 three Bass and T1-T3 three Trebles. Bass and Treble can work together.

How to control EQ properly

(1) Using remote to control EQ function


- You will see EQ status when pressing EQ button on remote control;
- EQ mode will cyclically switch from EQ, E1, to;
- Mode will cyclically switch from VOL, BASS, TREBLE by pressing FUNC button. You can control the volume level of bass or treble by pressing volume up and down button.

(2) Using knob on product to control EQ function


- EQ status will show on screen by pressing knob;
- EQ mode will switch cyclically from VOL, EQ, BASS, TREBLE;
- Rotating knob to change the EQ mode or TONE.

△ NOTE: "EQ" on screen means EQ function off;

"to" on screen means that TONE is ON.

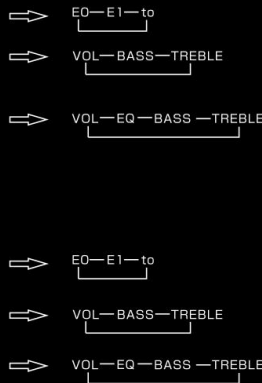

3. 遥控说明 (Remote controller)

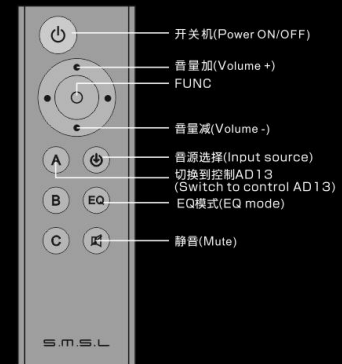

△注: 未标注的功能不适用于本机
NOTE: The button without note is invalid for AD13.